




NORDRIVE® is a registered trademark of  
**LAMPA S.p.A.**  
 Via G. Rossa 53/55, 46019 Viadana (MN) ITALY  
 Tel. +39 0375 820700  
 UNI EN ISO 9001:2015 Certified Company  
 www.nordrive.it www.lampa.it

**NORDRIVE®**  
 TRANSPORT SOLUTIONS

- ① STAFFE DI FISSAGGIO
- ② FITTING KIT
- ③ PATTES DE FIXATION
- ④ BEFESTIGUNGSFÜßE
- ⑤ FIJACIÓN

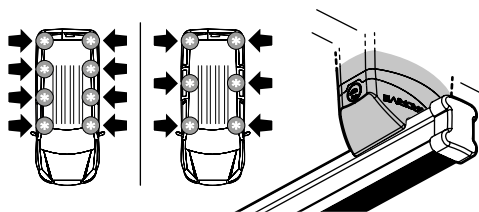

**KIT x6**

- 01/21 →
- 01/21 →
- 01/21 →
- 01/21 →

**VOLKSWAGEN CADDY**  
**VOLKSWAGEN CADDY LIFE**  
**VOLKSWAGEN CADDY MAXI**  
**VOLKSWAGEN CADDY MAXI LIFE**



Art. **N30413**

CUT SIGILLO - SEAL CUT SIGILLO - SEAL CUT SIGILLO - SEAL CUT SIGILLO - SEAL CUT SIGILLO - SEAL CUT SIGILLO - SEAL CUT SIGILLO - SEAL CUT SIGILLO - SEAL

**NORDRIVE®**  
 TRANSPORT SOLUTIONS

### ① STAFFE DI FISSAGGIO

Da abbinare alle barre:

- KARGO (ACCIAIO)
- KARGO-PLUS (ALLUMINIO)

### ② FITTING KIT

To combine with bars:

- KARGO (STEEL)
- KARGO-PLUS (ALUMINIUM)

### ③ PATTES DE FIXATION

À combiner avec les barres:

- KARGO (ACIER)
- KARGO-PLUS (ALUMINIUM)

### ④ BEFESTIGUNGSFÜßE

Zum Kombinieren mit spezifischen Lastenträgern:


- KARGO (STAHL)
- KARGO-PLUS (ALUMINIUM)

### ⑤ FIJACIÓN

Para combinar con la barras portacargas:

- KARGO (ACERO)
- KARGO-PLUS (ALUMINIO)

**KIT x6**

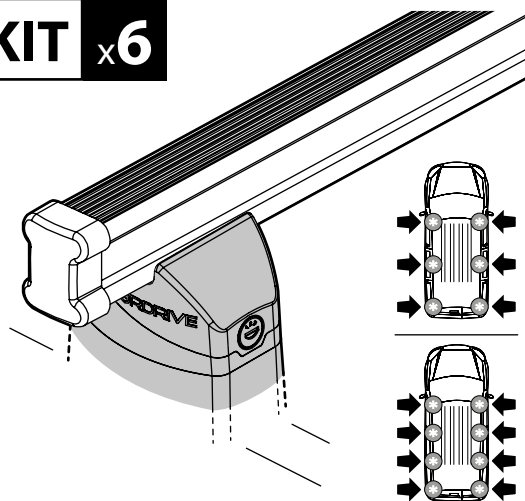

TESTATO E CERTIFICATO

MAX  
**150 kg**



TESTED AND APPROVED - GEPRÜFT UND ZERTIFIZIERT



**VOLKSWAGEN CADDY**  
**VOLKSWAGEN CADDY LIFE**  
**VOLKSWAGEN CADDY MAXI**  
**VOLKSWAGEN CADDY MAXI LIFE**

- 01/21 →
- 01/21 →
- 01/21 →
- 01/21 →

Art. **N30413**



8 034057 304134

Lot N°

Made in China

Art. **N30413**

**VOLKSWAGEN CADDY**

2000  
01/21 →

**VOLKSWAGEN CADDY LIFE**

2000  
01/21 →



**VOLKSWAGEN CADDY  
MAXI**

2000  
01/21 →

**VOLKSWAGEN CADDY  
MAXI LIFE**

2000  
01/21 →


**KIT x6**

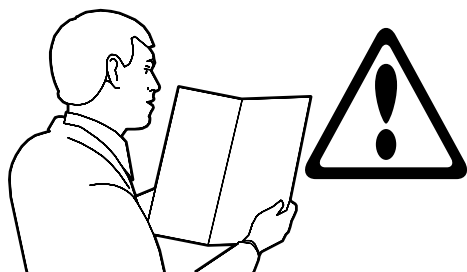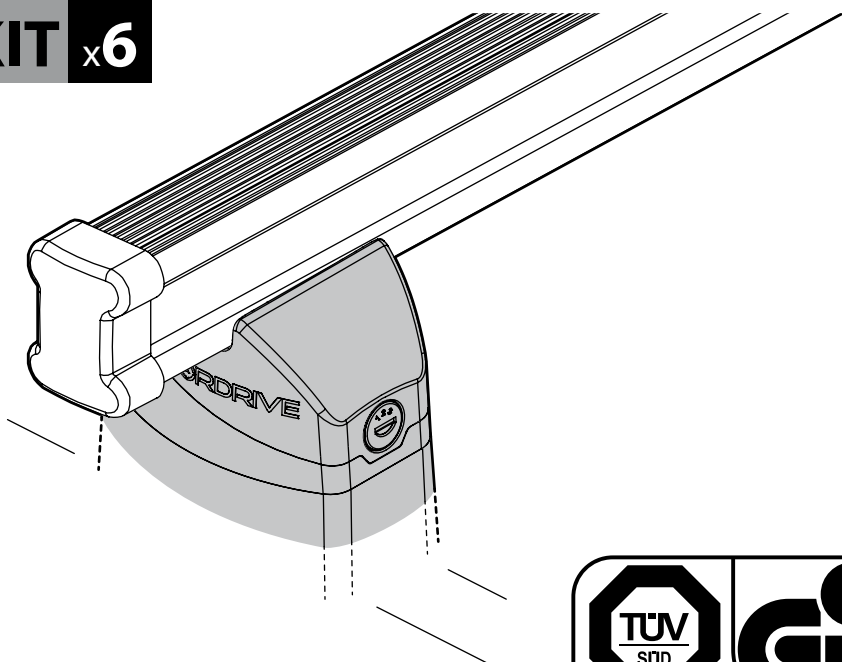

- ① ADATTO PER
- Ⓒ SUITABLE FOR
- Ⓕ INDIQUÉ POUR
- Ⓓ GEEIGNET FÜR
- Ⓔ ADECUADA PARA

**NORDRIVE  
KARGO SERIES**

- ① ISTRUZIONI DI MONTAGGIO
- Ⓒ FITTING INSTRUCTIONS
- Ⓓ MONTAGEANLEITUNG
- Ⓕ INSTRUCTIONS DE MONTAGE
- Ⓔ ISTRUCCIONES DE MONTAJE
- Ⓖ INSTRUÇÕES DE MONTAGEM
- Ⓗ MONTAGE-INSTRUCTIES
- Ⓒ MONTERINGSANVISNING
- Ⓕ ASENNUSOHJE
- Ⓔ PAIGALDUSJUHEND
- Ⓗ STIPRINĀŠANAS INSTRUKCIJA
- Ⓕ PRITVIRTINIMO INSTRUKCIJOS
- Ⓖ INSTRUKCJA MONTAŻU
- Ⓕ Инструкции по установке
- Ⓕ NÁVOD NA MONTÁŽ
- Ⓕ NÁVOD NA MONTÁŽ
- Ⓕ NAVODILA ZA PRITRJEVANJE
- Ⓕ UPUTA ZA SASTAVLJANJE
- Ⓕ A FELSZERELÉS MÓDJA
- Ⓕ Οδηγίες συναρμολόγησης
- Ⓕ MONTAJ TALIMATLARL
- Ⓕ ИHCTPYKЦИИ ЗА MONTAЖ
- Ⓕ UPUTSTVA ZA MONTAŽU

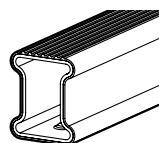


**Kargo**  
ACCIAIO  
Steel

- ① BARRE KARGO
- Ⓒ KARGO BARS
- Ⓕ BARRES KARGO
- Ⓓ DACH-LASTENTRÄGER KARGO
- Ⓔ BARRES KARGO

150cm

Art. **N10010** x3

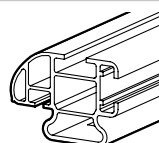


**Kargo-Plus**  
ALLUMINIO  
Aluminium

- ① BARRE KARGO-PLUS
- Ⓒ KARGO-PLUS BARS
- Ⓕ BARRES KARGO-PLUS
- Ⓓ DACH-LASTENTRÄGER KARGO-PLUS
- Ⓔ BARRES KARGO-PLUS


150cm

Art. **N10040** x3

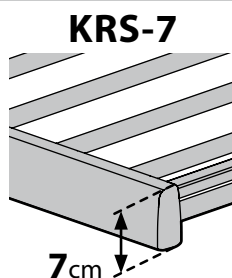

**KRS-7**

7cm

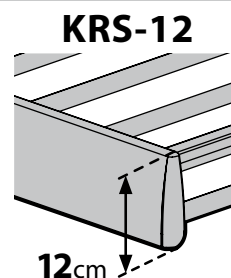


**KRS-12**

12cm

- ① CESTE PORTATUTTO KRS-7 / KRS-12
- Ⓒ KRS-7 / KRS-12 VAN ROOF RACKS
- Ⓕ GALERIE KRS-7 / KRS-12
- Ⓓ DACHKÖRBEIN KRS-7 / KRS-12
- Ⓔ BACAS KRS-7 / KRS-12

**NORDRIVE®**




TRANSPORT SOLUTIONS

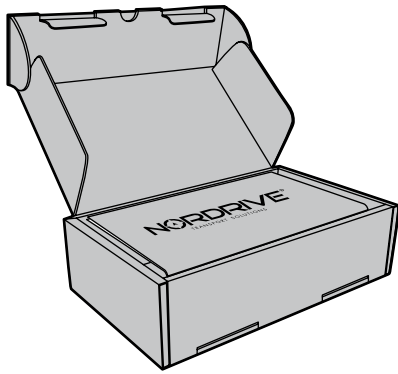










# NORDRIVE<sup>®</sup>












TRANSPORT SOLUTIONS



Art. **N30413**

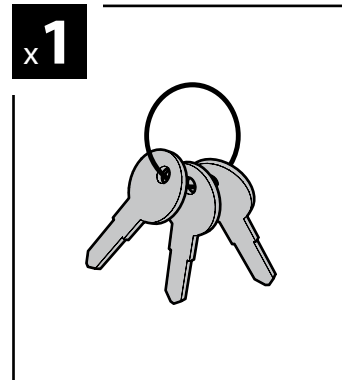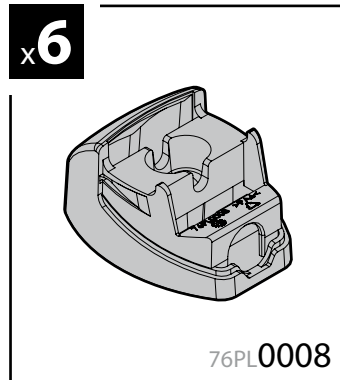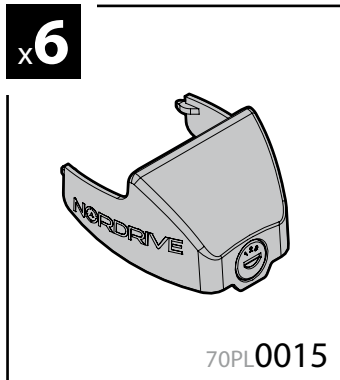

**1 x Year**

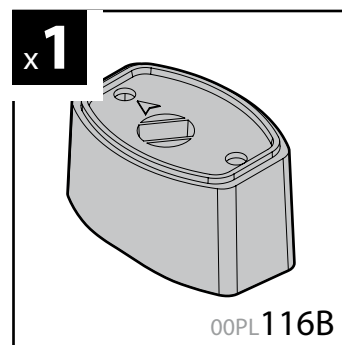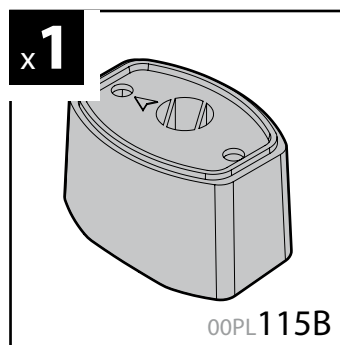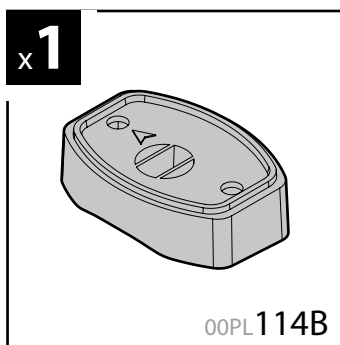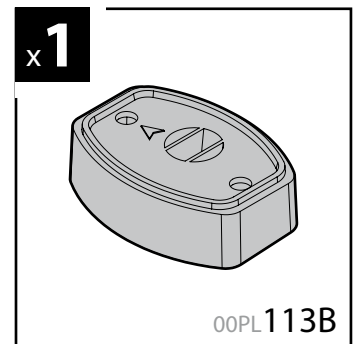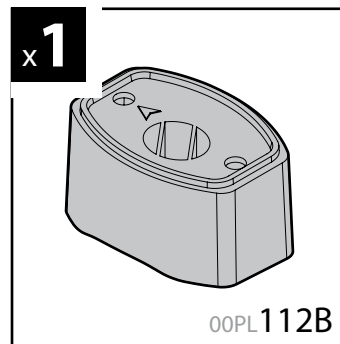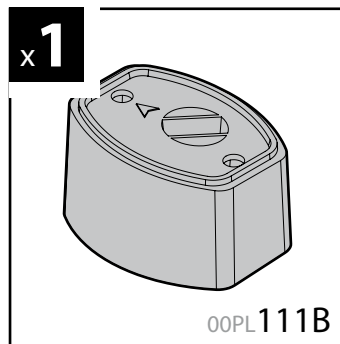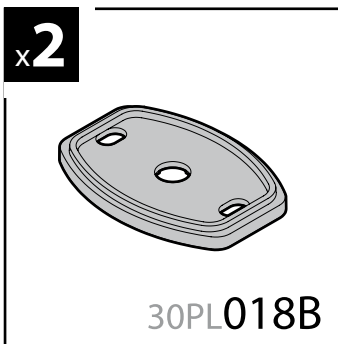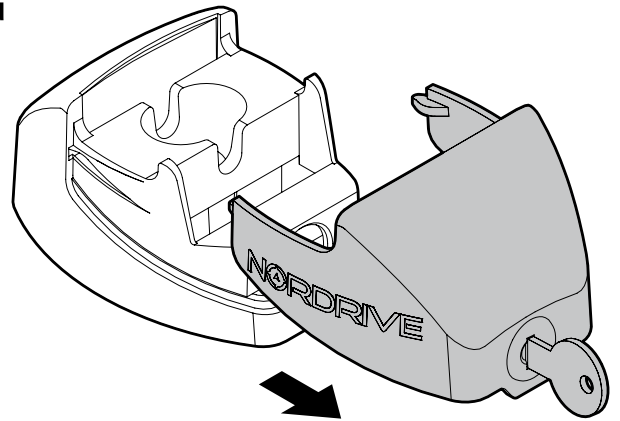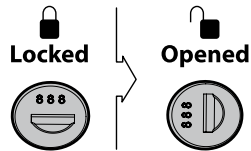

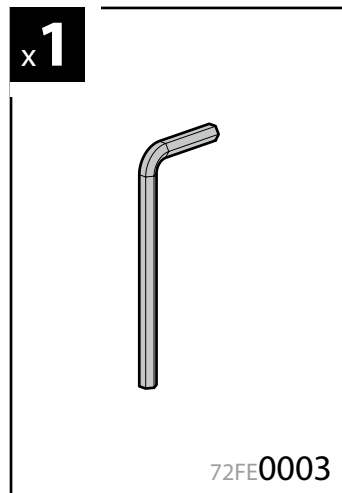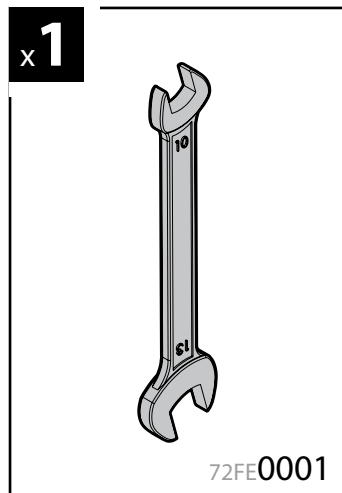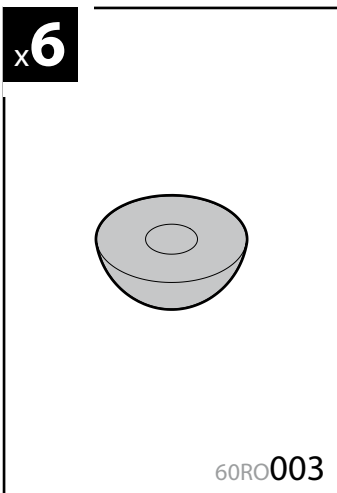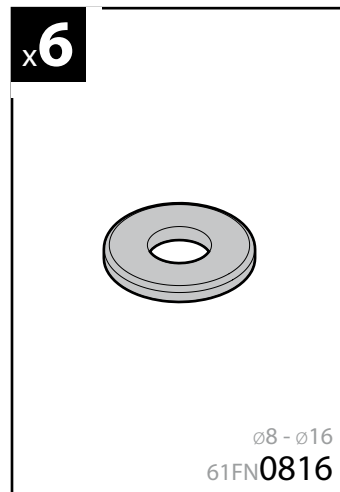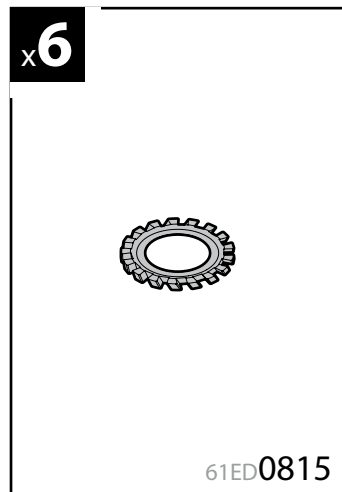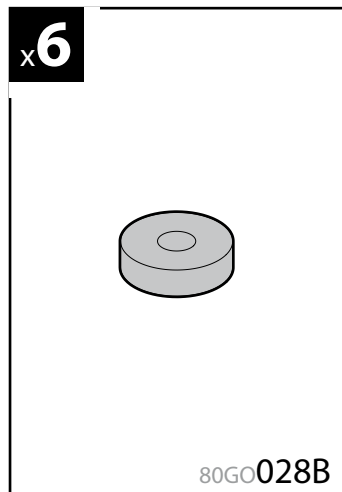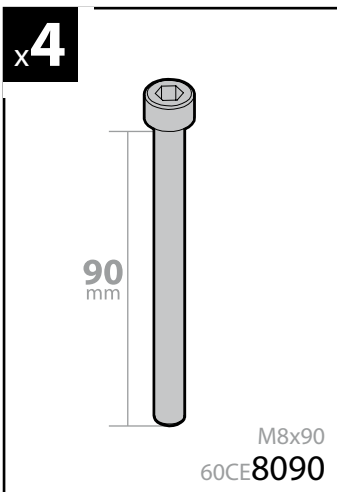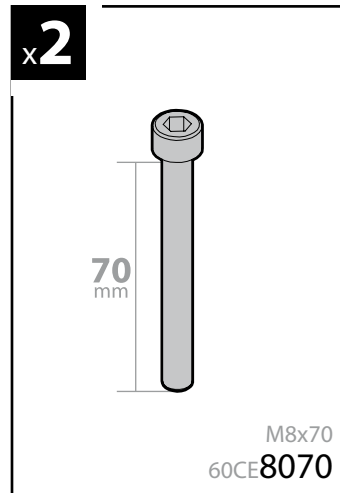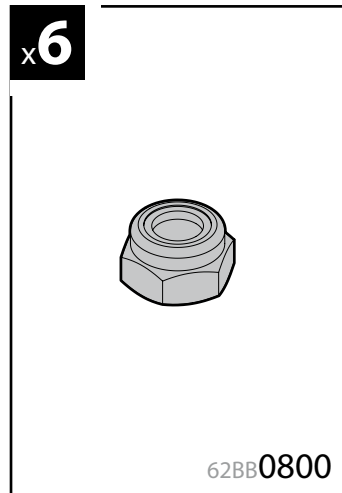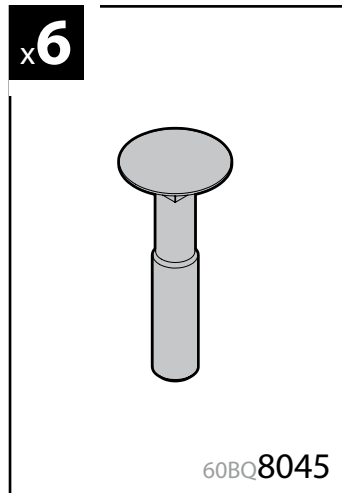
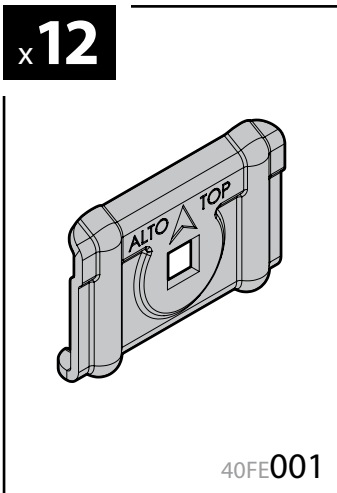


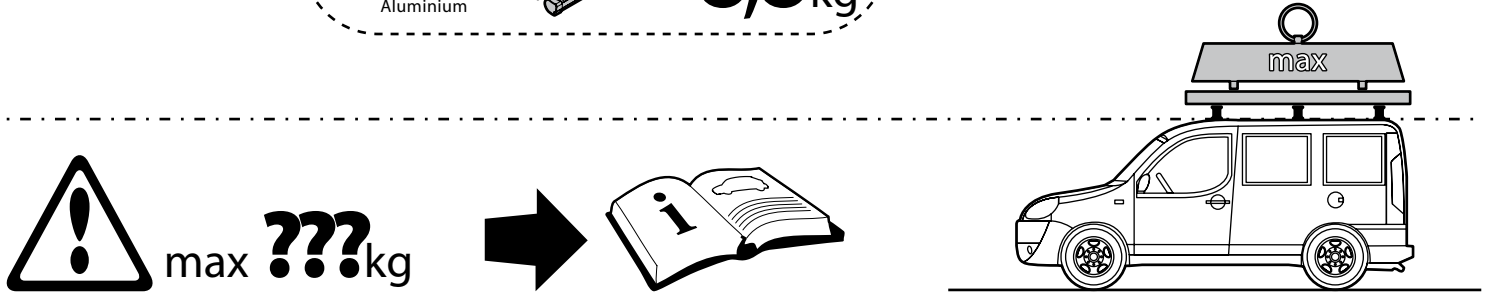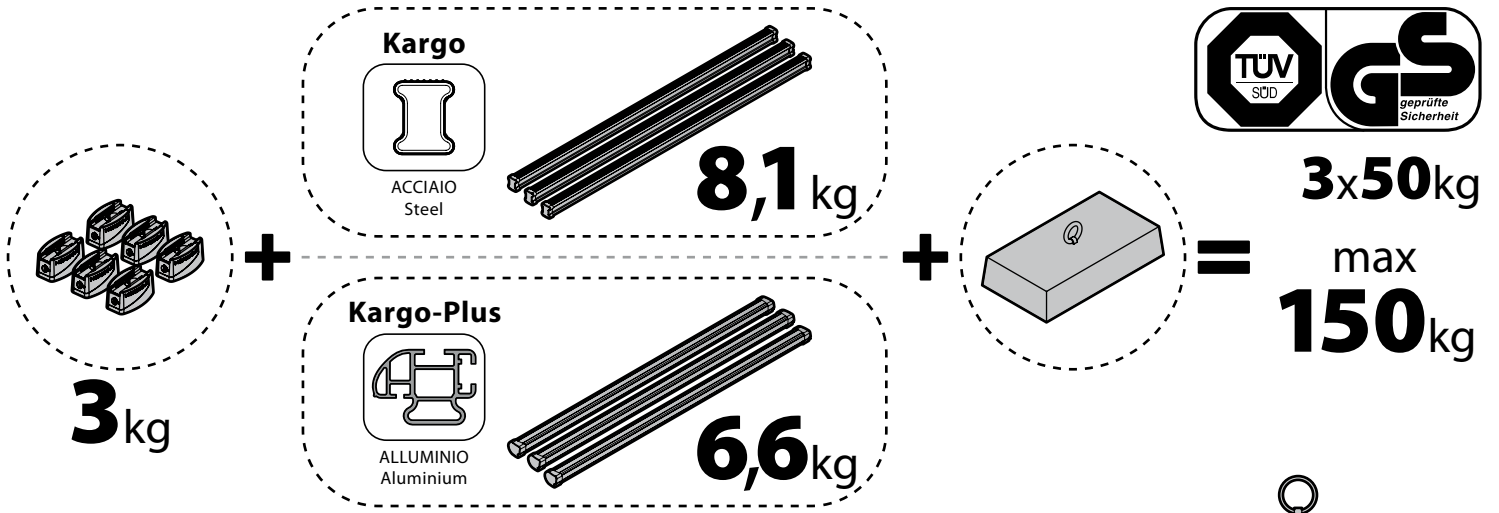

SAFETY REGULATIONS

Safety regulations

NORME DI SICUREZZA

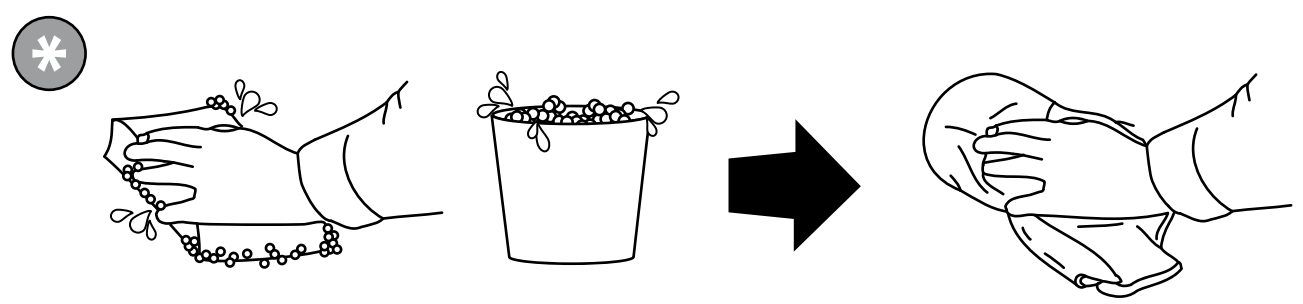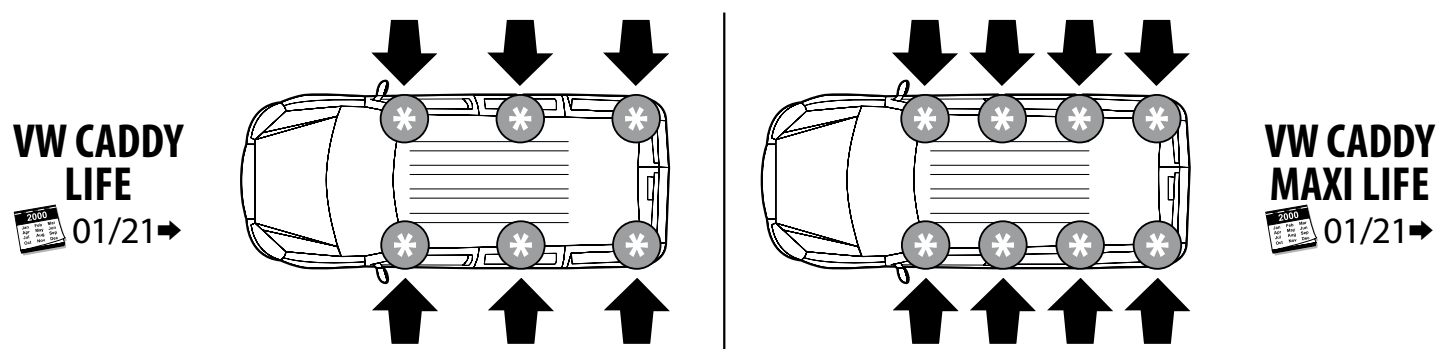


(I) ISTRUZIONI DI MONTAGGIO  
 (GB) FITTING INSTRUCTIONS  
 (D) MONTAGEANLEITUNG  
 (F) INSTRUCTIONS DE MONTAGE  
 (E) INSTRUCCIONES DE MONTAJE  
 (P) INSTRUÇÕES DE MONTAGEM  
 (NL) MONTAGE-INSTRUCTIES  
 (S) MONTERINGSANVISNING


(FIN) ASENNUSOHJE  
 (EST) PAIGALDUSJUHEND  
 (LAT) STIPRINĀŠANAS INSTRUKCIJA  
 (LT) PRITVIRTINIMO INSTRUKCIJOS  
 (PL) INSTRUKCJA MONTAŻU  
 (RUS) Инструкции по установке  
 (CZ) NÁVOD NA MONTÁŽ  
 (SK) NÁVOD NA MONTÁŽ

(SLO) NAVODILA ZA PRITRJEVANJE  
 (HR) UPUTA ZA SASTAVLJANJE  
 (H) A FELSZERELÉS MÓDJA  
 (GR) Οδηγία συναρμολόγησης  
 (TR) MONTAJ TALIMATLARI  
 (BG) ИНСТРУКЦИИ ЗА МОНТАЖ  
 (SRB) UPUTSTVA ZA MONTAŽU


1


**VOLKSWAGEN CADDY / CADDY LIFE**

 01/21 →

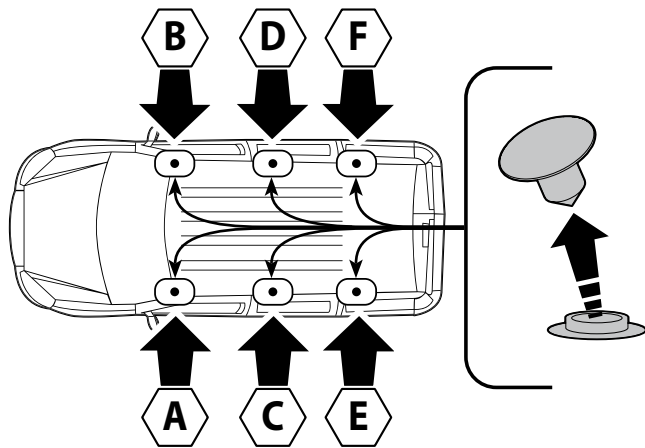


**VOLKSWAGEN CADDY MAXI / MAXI LIFE**

 01/21 →

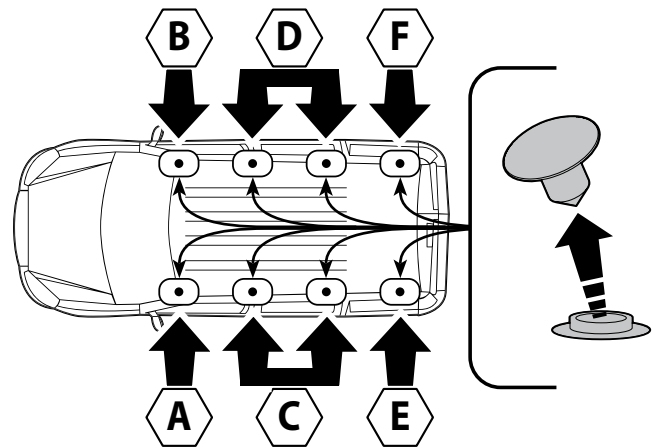


2

**A**

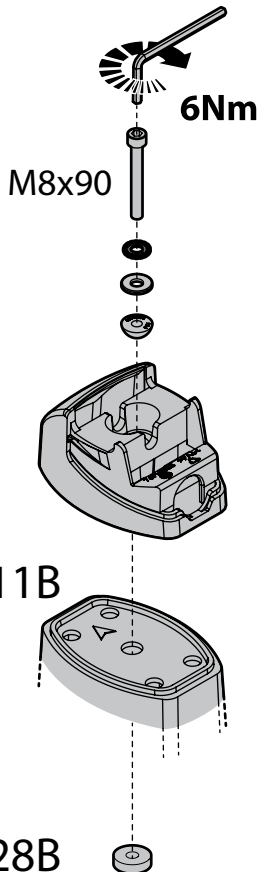


2

**B**

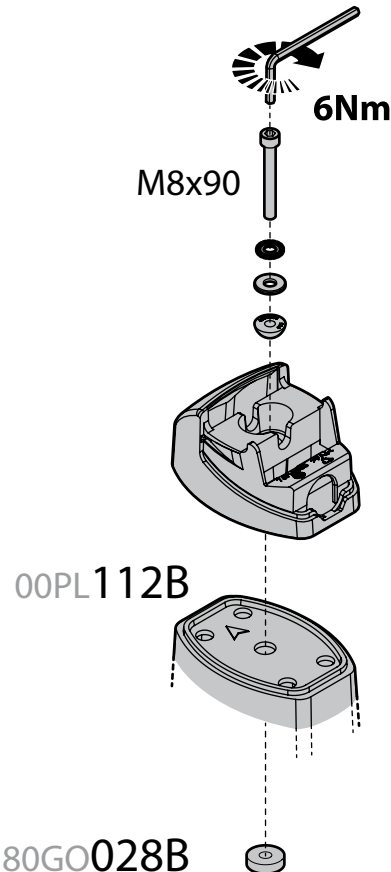


2

**C**

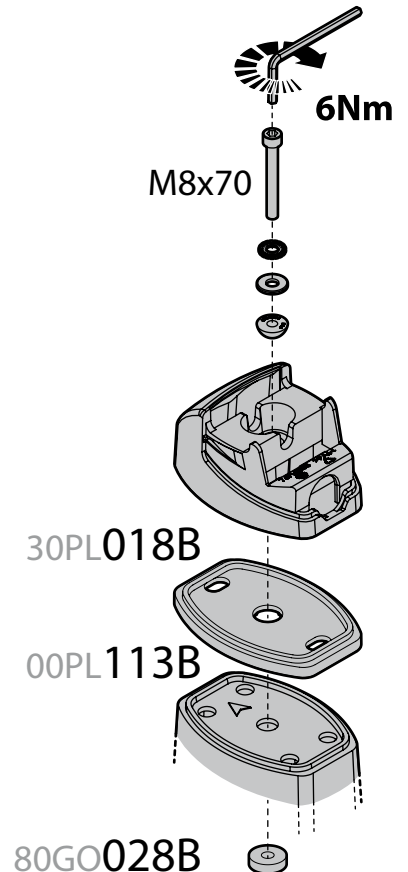


2

D

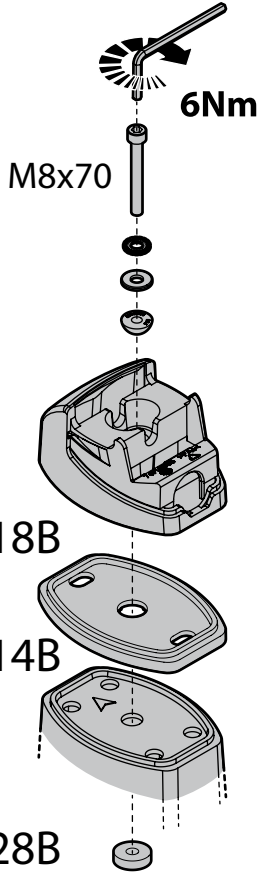


2

E

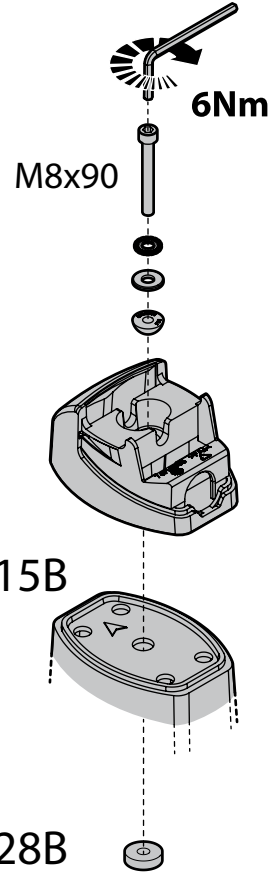

2

F

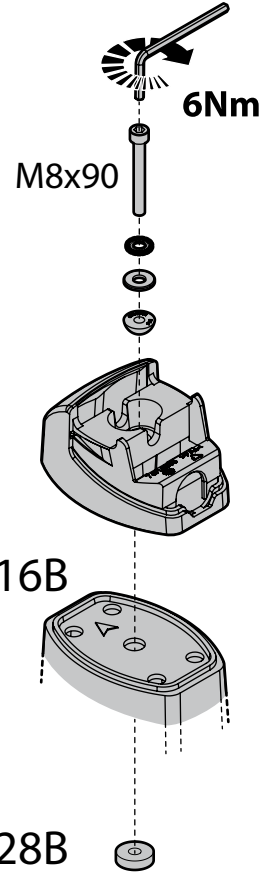





# ATTENZIONE WARNING



## Kargo

# A




ACCIAIO  
Steel

MONTAGGIO DIRETTO  
SUI KIT PIEDI SPECIFICI  
DIRECTLY ON FOOT KITS  
BEFESTIGUNGSFÜSSE

## Kargo-Plus



# B

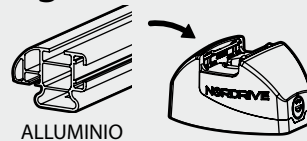



ALLUMINIO  
Aluminium

MONTAGGIO DIRETTO  
SUI KIT PIEDI SPECIFICI  
DIRECTLY ON FOOT KITS  
BEFESTIGUNGSFÜSSE



OK ✓

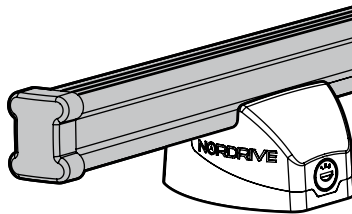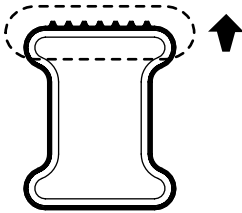







NO ✗

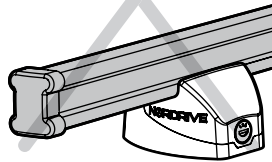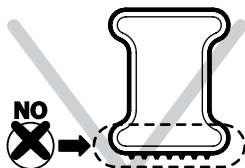

OK ✓



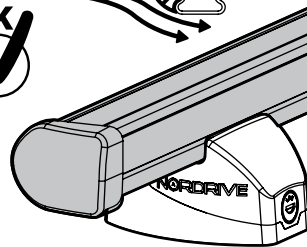
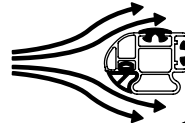


NO ✗

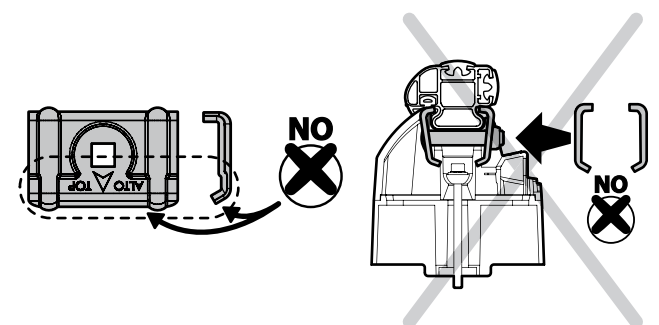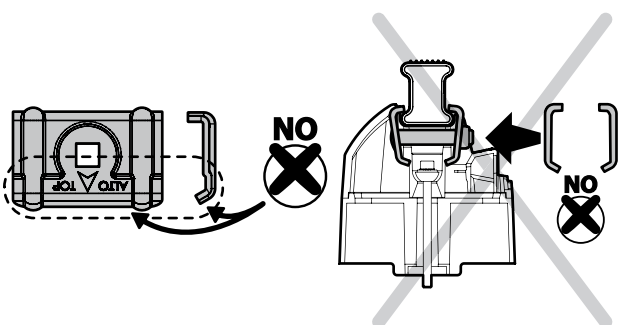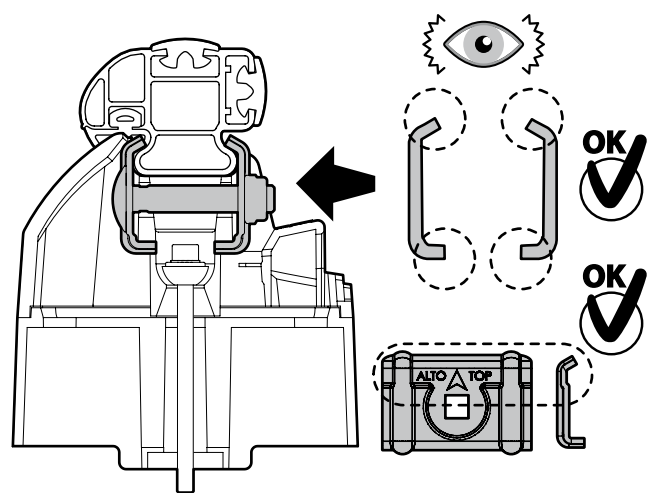
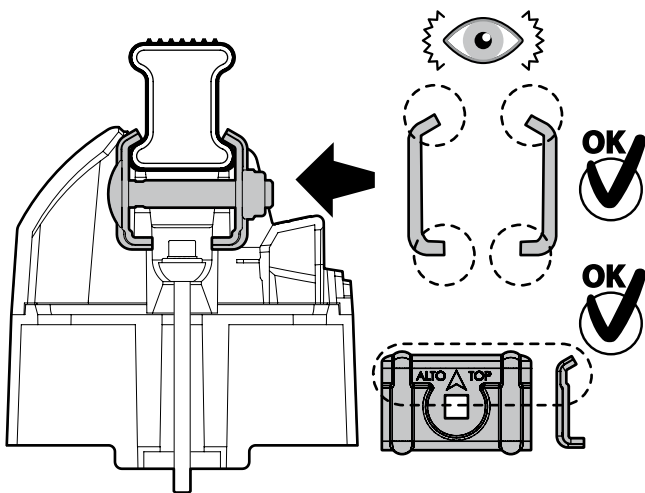
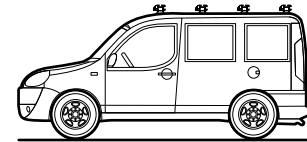
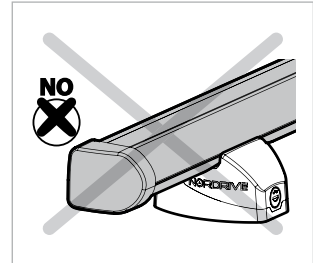




3

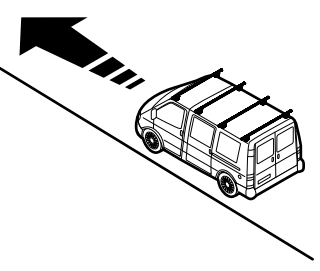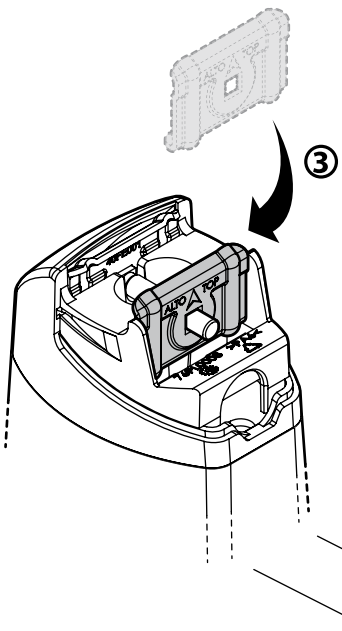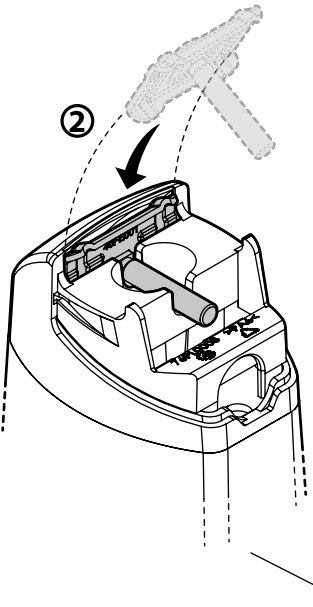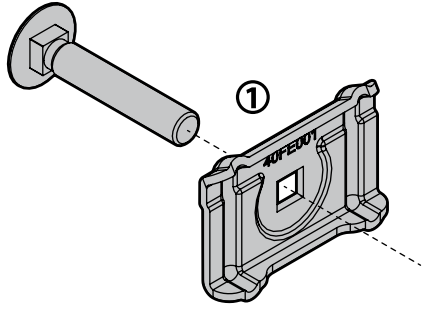


4

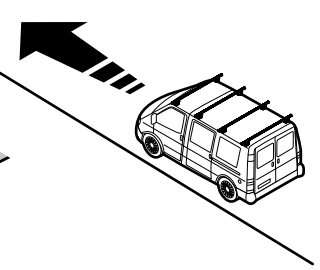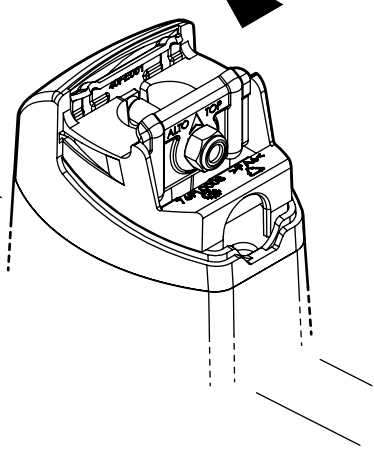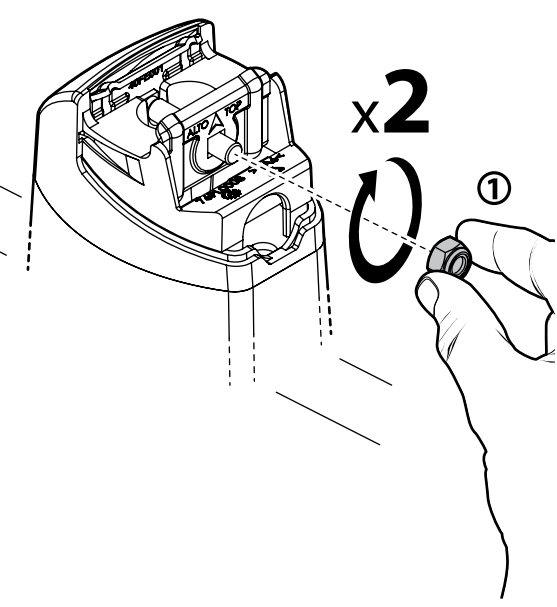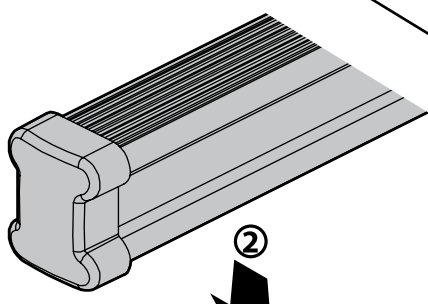


5


**A**

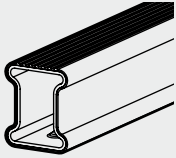


**Kargo**




ACCIAIO  
Steel

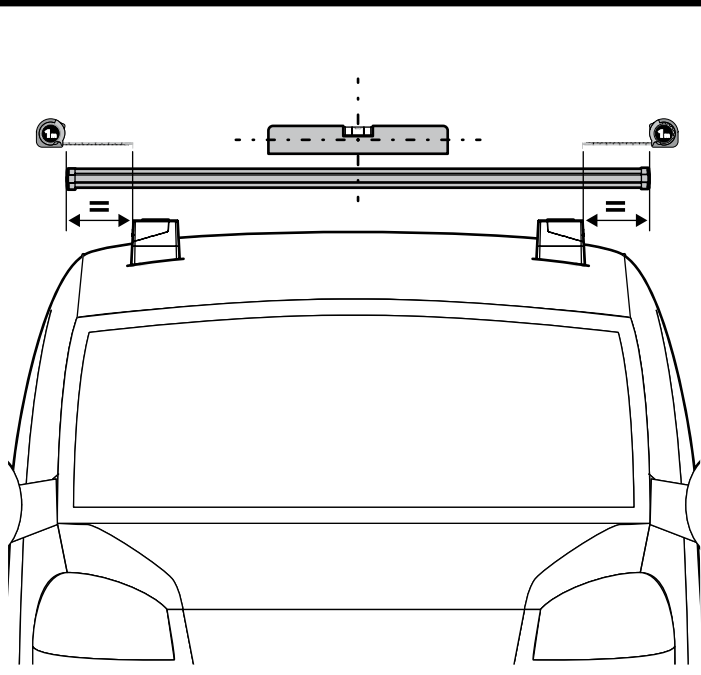

**B**

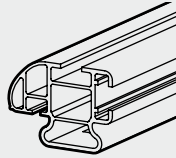


**Kargo-Plus**




ALLUMINIO  
Aluminium


①

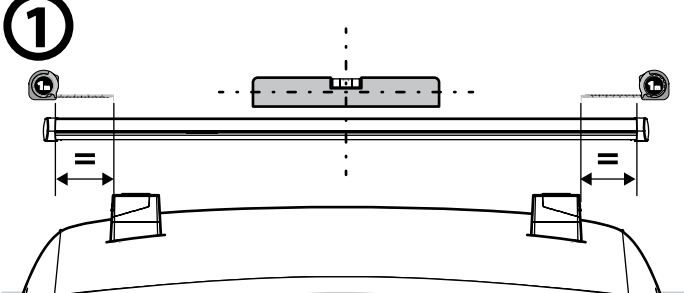


②

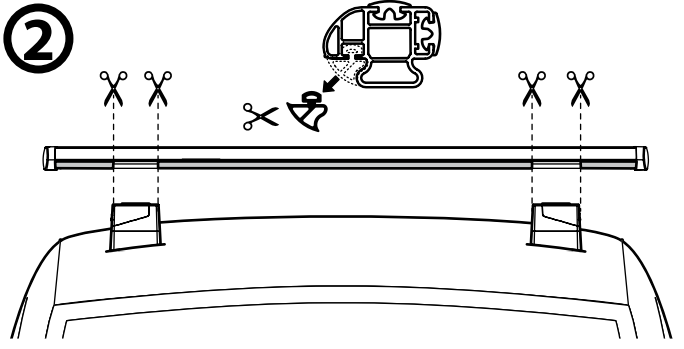

6


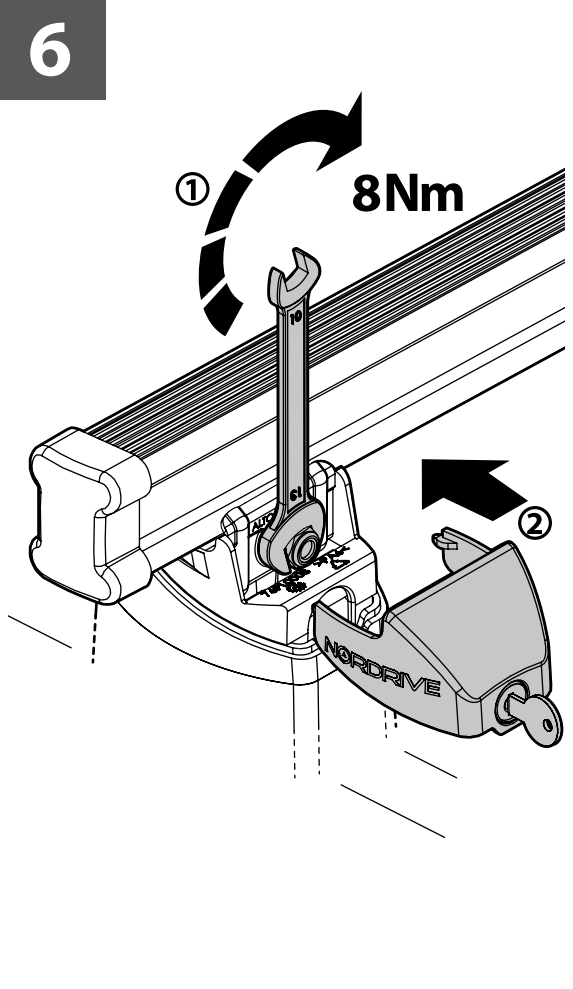


① 8Nm

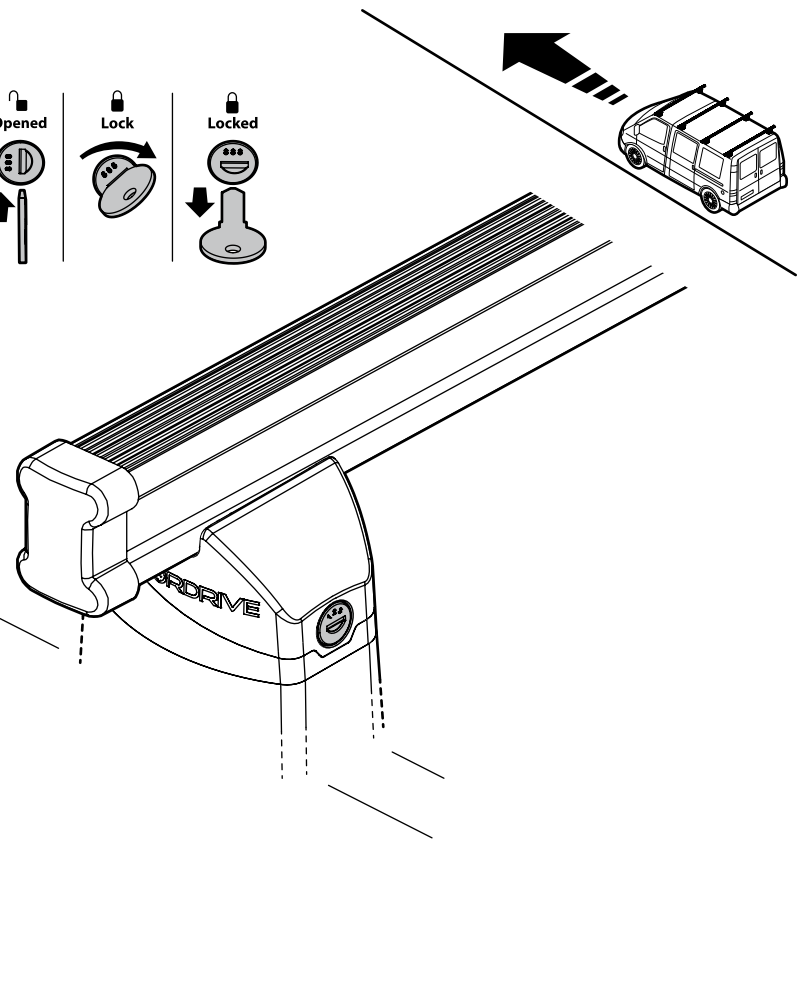

②


Opened Lock Locked

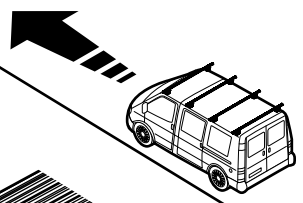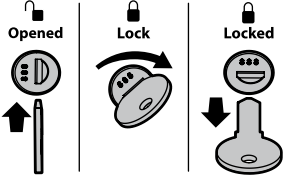

# Kargo series




Acciaio / Steel

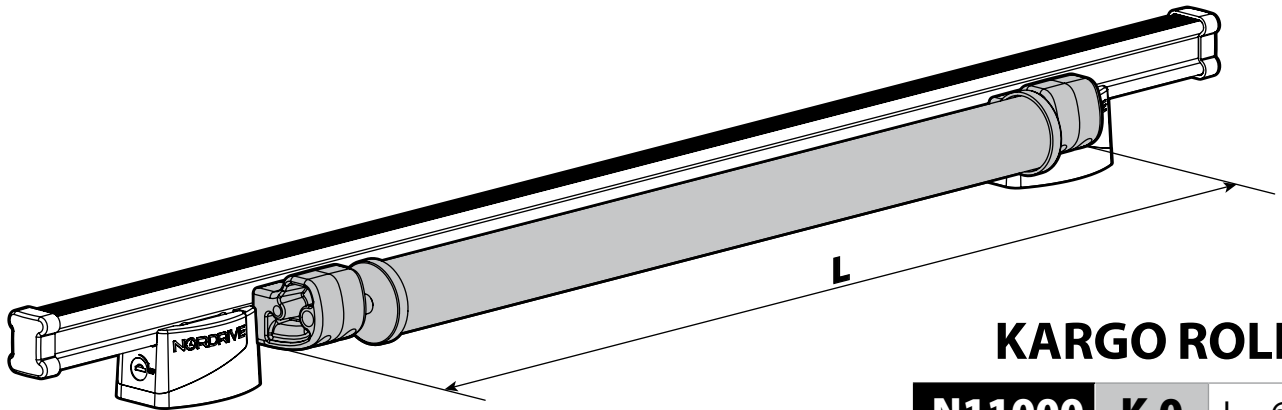


## KARGO ROLLER

<b>N11000</b>	<b>K-0</b>	L = 64 cm
<b>N11003</b>	<b>K-7</b>	L = 96 cm

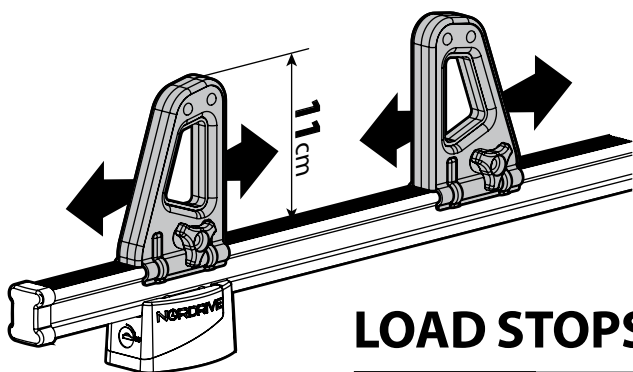


## LOAD STOPS

**N11001** K-1

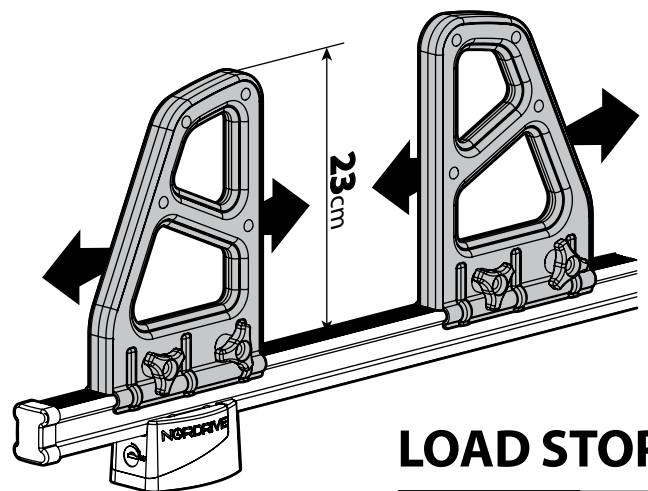

## LOAD STOPS

**N11002** K-2

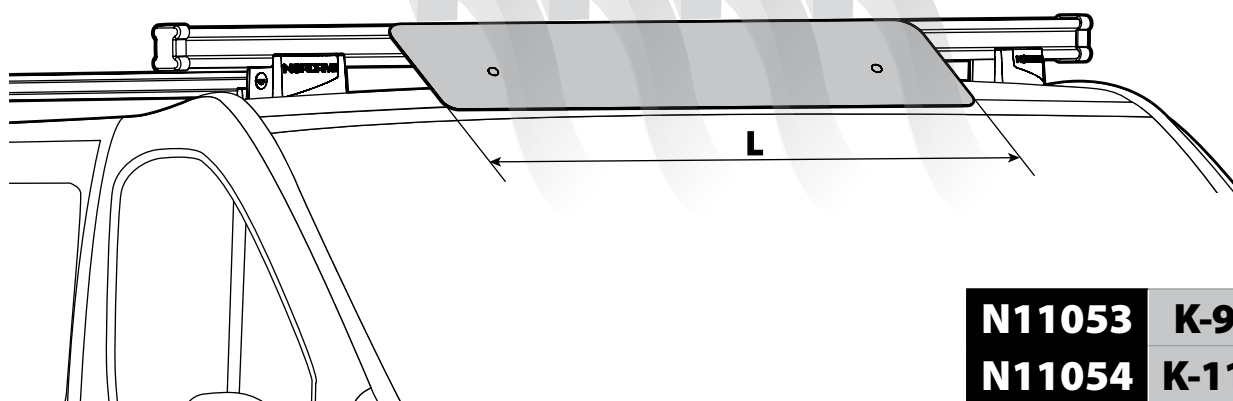


## SPOILER


<b>N11053</b>	<b>K-9</b>	L = 95 cm
<b>N11054</b>	<b>K-11</b>	L = 110 cm

**OPTIONALS** PER / FOR / FÜR:

# Kargo-Plus series


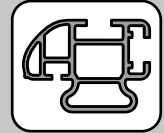


Alluminio / Aluminium

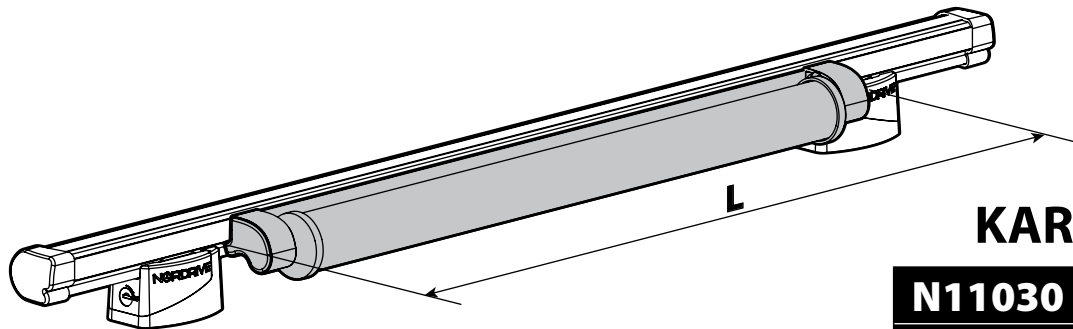


## KARGO ROLLER

<b>N11030</b>	<b>KP-0</b>	L = 64 cm
<b>N11034</b>	<b>KP-7</b>	L = 96 cm

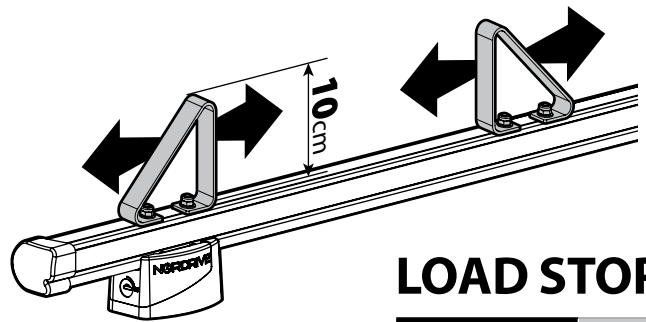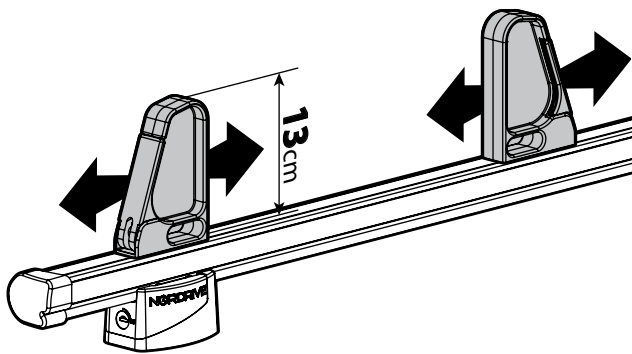


## LOAD STOPS

**N11031** KP-1

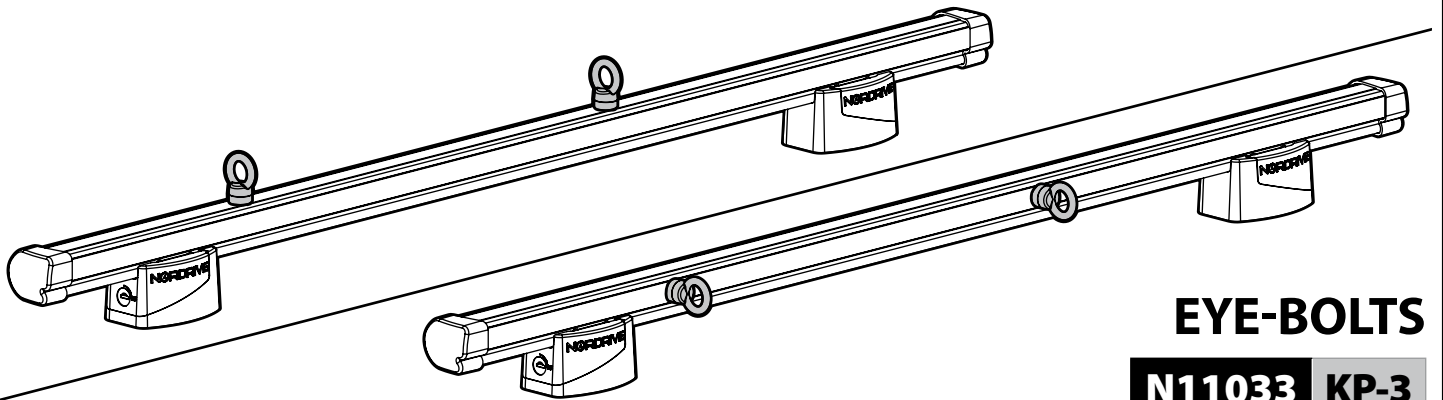

## EYE-BOLTS

**N11033** KP-3

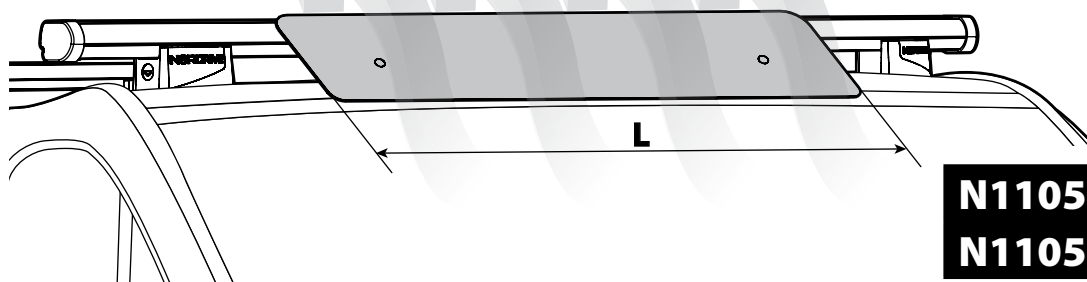

## SPOILER

<b>N11057</b>	<b>KP-9</b>	L = 95 cm
<b>N11058</b>	<b>KP-11</b>	L = 110 cm

**OPTIONALS** PER / FOR / FÜR:

**Kargo** series



Acciaio / Steel


**Kargo-Plus**  
series



Alluminio / Aluminium



**KARGO-TUBE**

<b>N11050</b>	<b>T200</b>	L = 205 cm
<b>N11051</b>	<b>T300</b>	L = 305 cm
<b>N11052</b>	<b>T400</b>	L = 405 cm

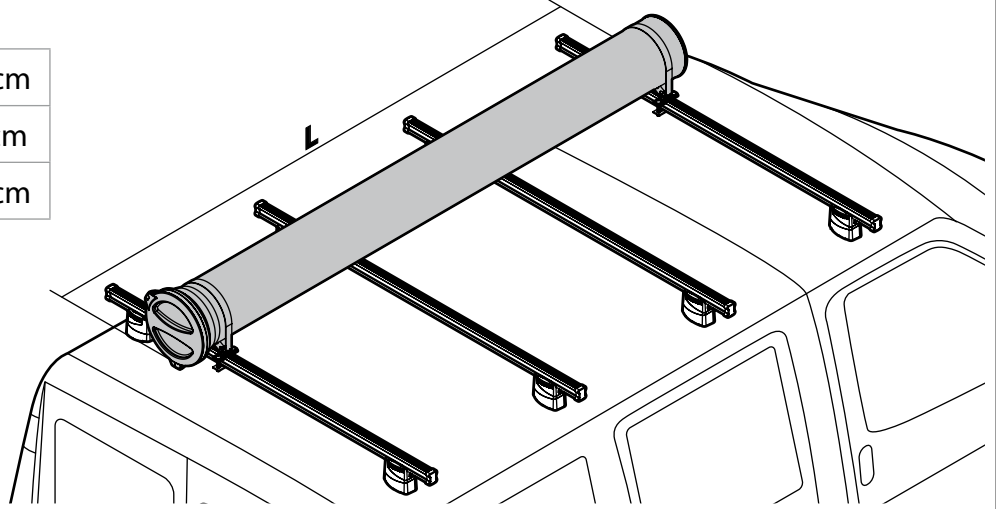


**LADDER HOLDER STRAPS**

**N11065** U-5

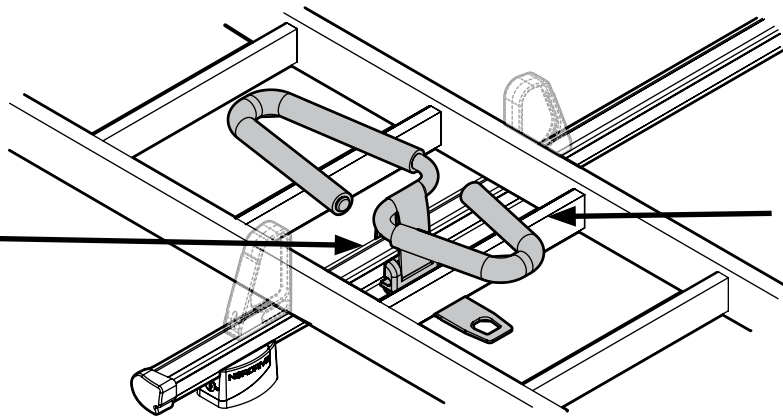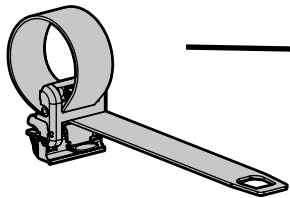


**LADDER STEP ADAPTER**

**N11067** U-6

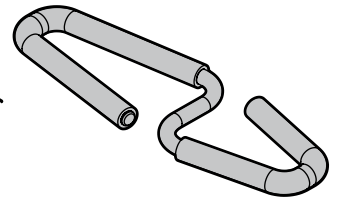

**EXTENSION ROLLER**

<b>N11020</b>	<b>U-0</b>	L = 64 cm
<b>N11021</b>	<b>U-7</b>	L = 96 cm

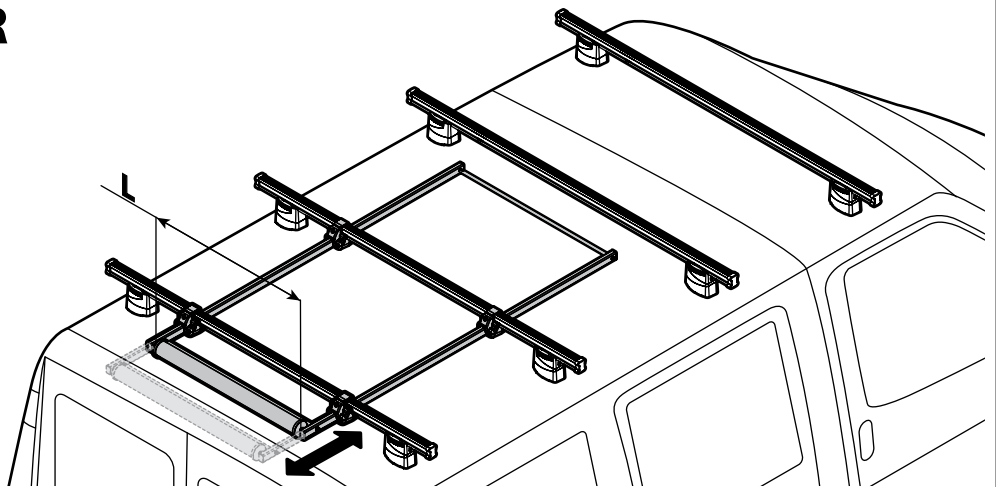

- (I) Lotto di produzione da comunicare per eventuali ricambi
- (GB) Production lot number to be communicated for any spare parts
- (F) Lot de production à communiquer pour toute pièce de rechange
- (D) Produktionscharge für eventuelle Ersatzteile
- (E) Lote de producción a comunicar por cualquier repuesto

**Lot.**

**NORDRIVE®**  
TRANSPORT SOLUTIONS

NORDRIVE® is a registered trademark of  
**LAMPA S.p.A.**  
Via G. Rossa 53/55, 46019 Viadana (MN) ITALY  
Tel. +39 0375 820700  
UNI EN ISO 9001:2008 Certified Company  
[www.nordrive.it](http://www.nordrive.it)  
[www.lampa.it](http://www.lampa.it)